# INSTALLATION INSTRUCTIONS


For Model 2649-04

# PLEASE READ AND SAVE THESE INSTRUCTIONS

These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning installation of the lighting fixture. We strongly suggest that all direct wired fixtures be installed by a qualified, licensed electrician.

# WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER. BEFORE INSTALLATION

AVERTISSEMENT! COUPER LE COURANTAU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

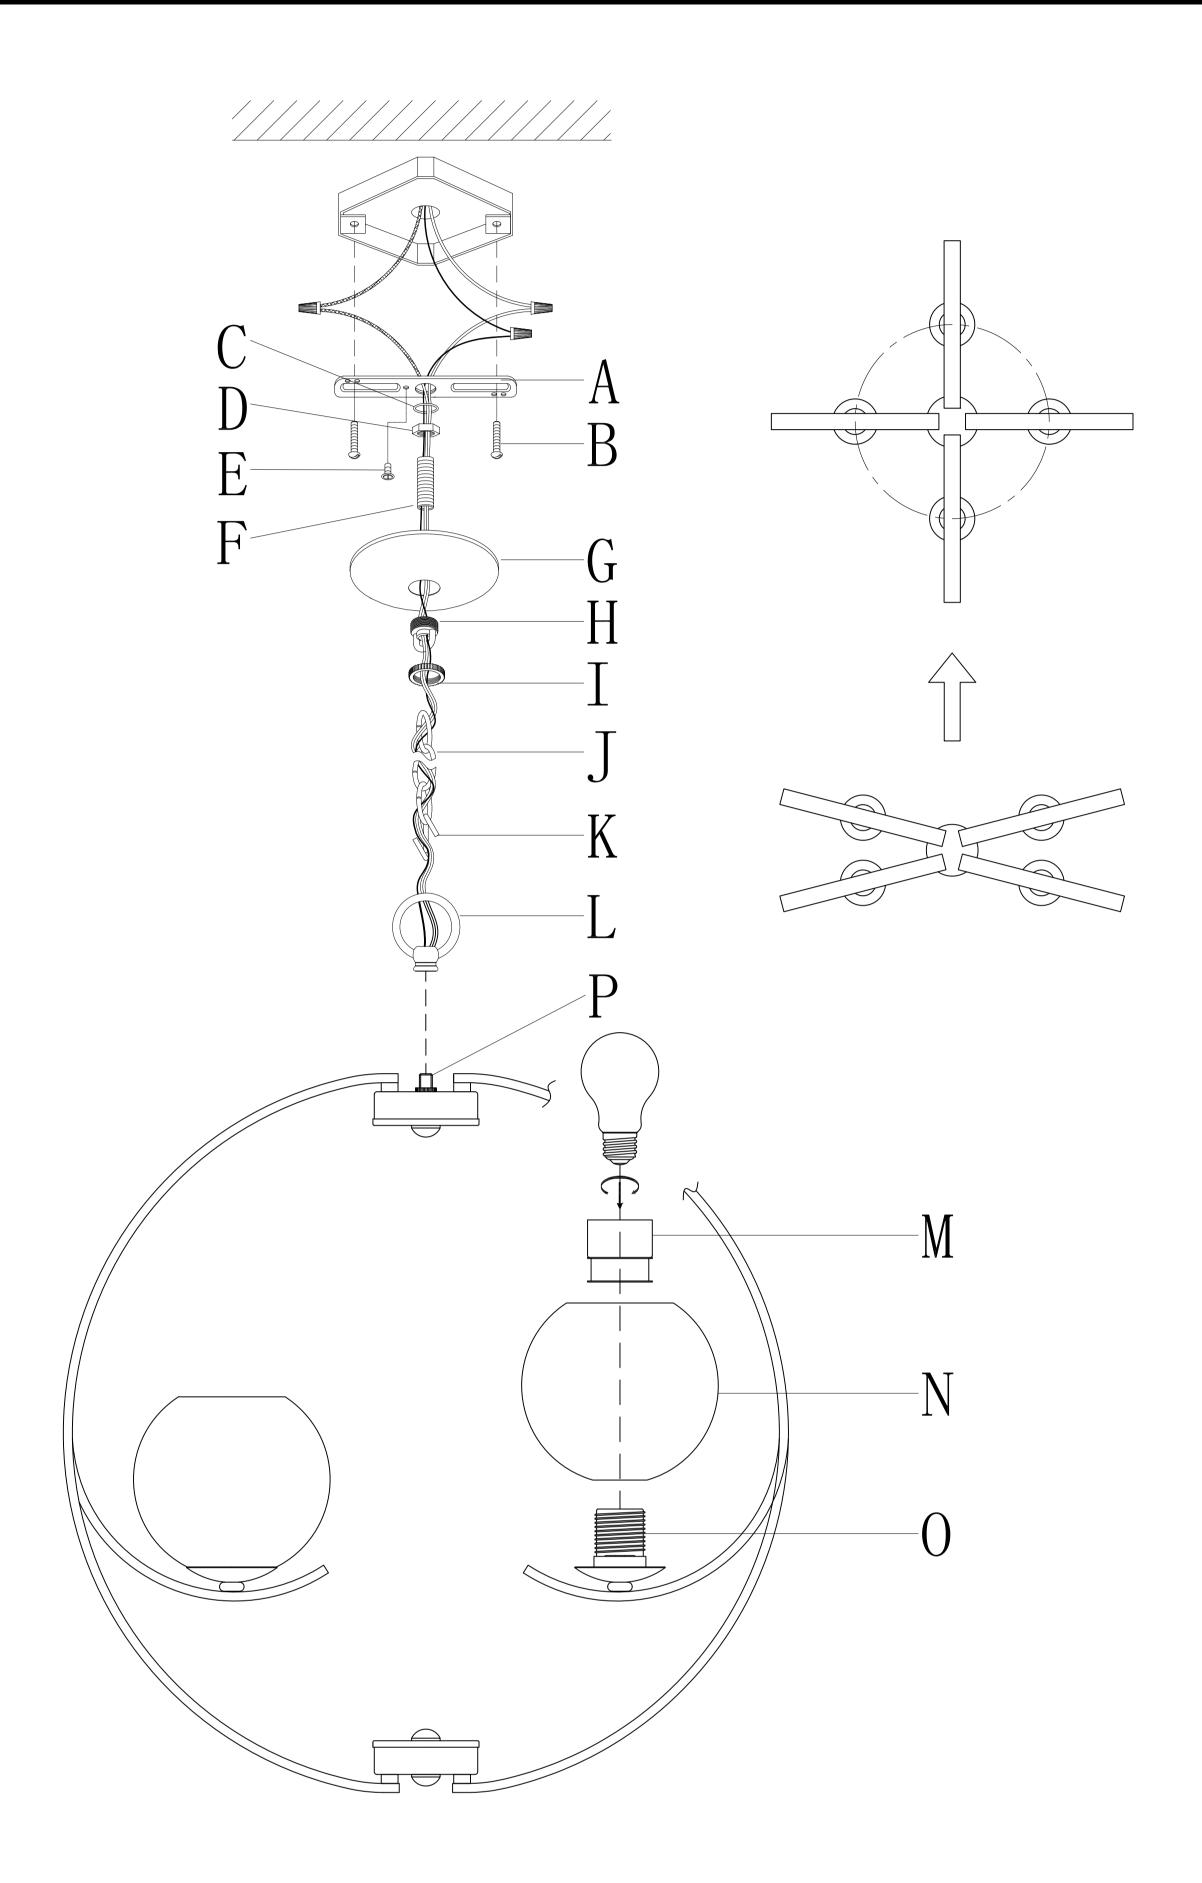

#### PREPARING FOR INSTALLATION

Remove all contents from the carton. See the important illustration above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

Remove the mounting strap assembly from the bag. One end of the nipple (F) should be threaded onto to the mounting bracket (A) along with the washer and the hex nut(C, D) in place. The other end should have the canopy loop (H) attached.


Attach the mounting bracket (A) to the junction box by securely tightening the 2 mounting screws (B). Unscrew the canopy loop ring (I) from the canopy loop (H). Place the canopy (G) over the canopy loop (H) so that it's flush against the ceiling. Adjust the position of nipple (F) on the mounting bracket (A) so that the canopy (G) covers at least half exterior threads on the canopy loop (H) while it's securely connected to nipple (F). Once the ideal position of the nipple (F) is determined, securely tighten the washer (C) and the hex nut (D) onto the nipple (F) right beneath the mounting bracket (A) to secure the nipple in place.

# ASSEMBLING THE FIXTURE

Attach the fixture loop(L) onto the nipple(P). Determine the correct number of chain links needed for the proper hanging height. Use a pair of pliers to open and remove or add any excess chain. Lace the fixture's wires through the chain (every three links or so) and pull until taut. Once the ideal chain/wire length is achieved, attach the top end of chain (J) to the canopy loop(H) with a pair of pliers. Attach the other end of the chain (K) to the fixture loop (L). Allow the canopy(G) and the canopy loop ring(I) to rest on the canopy loop(H).

#### **CONNECTING THE WIRES**

Have an assistant support the weight of the fixture while completing wiring. Remove excess wire. Feed the fixture's wires through the canopy loop (H) and the nipple (F). Attach the fixtures' wires to the power supply wires from the junction box. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the same color wire pairs to the same color wire coming from the junction box (white with white and plack with black) DO NOT CONNECT DIFFERENT COLORED WIRES TOGETHER. Make sure all twists are in the same direction. If there is no ground wire (Green or copper) coming from the junction box, locate ground screw (E) on mounting bracket (A) and wrap the fixtures' ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

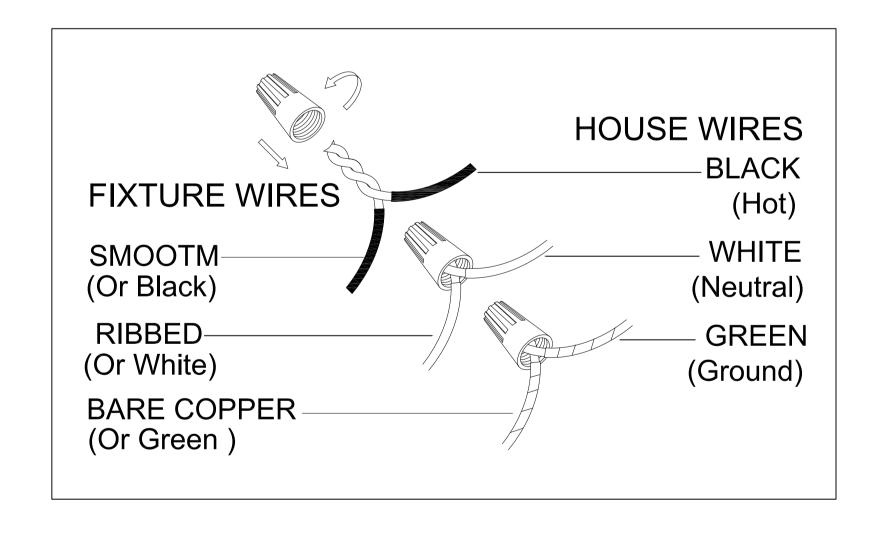

### FINISHING THE INSTALLATION

Place the canopy (G) flush to the ceiling and slide the canopy loop ring (I) under the canopy. Tightly screw the canopy loop ring (I) onto the canopy loop (H) to secure the canopy (G) in place.

Secure the glass (N) onto the socket (O) with the socket ring (M). Install a light bulb (not included) in accordance with the fixture's specifications. Do not exceed the recommended maximum wattage.

Your installation is now complete. Turn on the power and test the fixture.

#### **CLEANING TIPS**

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture. Dry with a lint-free or microfiber cloth.