

INSTALLATION INSTRUCTIONS

For Model 2718-06

PLEASE READ AND SAVE THESE INSTRUCTIONS

These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning installation of the lighting fixture. We strongly suggest that all direct wired fixtures be installed by a qualified, licensed electrician.

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.

BEFORE INSTALLATION


AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE

Screw fixture loop(L) onto the nipple(N). Cover the exposed hex nut on nipple (N) with cap (M). Secure the cap (M) by tightening the fixture loop (L) to nipple (N). Screw the center fixture rod (Q) to connect with the nipple (R). Hang the center cluster so the nipple (P) locks with the swivel (O). Adjust the fixture frame to the correct position to adjust sockets to a suitable angle. Attach the fixture ring(W) to the frame the tube (X) (Y) (Z) to make them vertical and attach with the thumb screw (V). Determine the correct number of chain links needed for proper hanging height. Use a pair of pliers to open and remove or add any excess chain. Lace the fixture's wires through the chain (every three links or so) and pull until taut. Once ideal chain/wire length is achieved, attach the top end of the chain (J) to the canopy loop (H) with a pair of pliers. Connect the other end of the chain (K) to the fixture loop (L). Place the canopy (G) and the canopy loop ring (I) so it rests over the canopy loop(H).

CONNECTING THE WIRES

Have an assistant support the weight of the fixture while completing the wiring. Remove any excess wire. Feed the fixture's wires through the canopy loop (H) and the nipple (F). Attach the fixtures' wires to the power supply wires from the junction box. Connect black to black (or smooth); white to white (or ribbed); ground to ground (green or copper). Twist the ends of the same color wire pairs to the same color wire coming from the junction box(white with white and black with black). **DO NOT CONNECT DIFFERENT COLOR WIRES TOGETHER.** Make sure all twists are in the same direction. If there is no ground wire (Green or copper) coming from the junction box, locate ground screw (E) on mounting bracket (A) and wrap the fixtures' ground wire around the green ground screw (E). Use a screwdriver to secure ground screw (E) onto the mounting bracket. Tuck all wires neatly into the junction box.

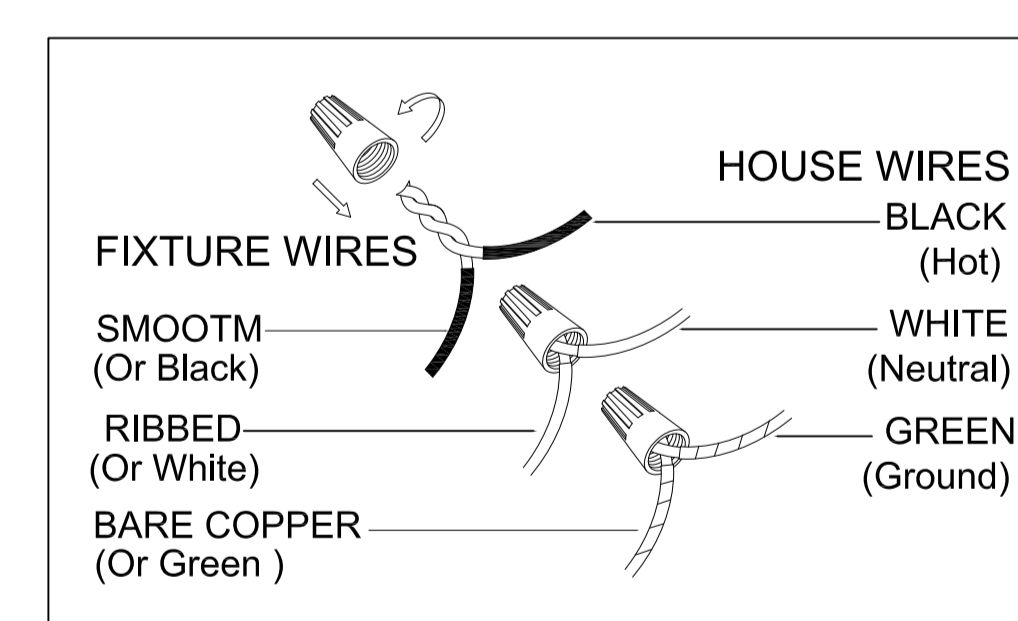

PREPARING FOR INSTALLATION

Remove all contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting strap.

Remove the mounting strap assembly from the bag. One end of the nipple (F) should be attached to the mounting bracket (A) with a washer and a hex nut(C, D) in place. The other end should have the canopy loop (H) attached.

Attach the mounting bracket (A) to the junction box by securely tightening the mounting screws (B). Unscrew the canopy loop ring (I) from the canopy loop (H). Place canopy (G) over the canopy loop (H) so that it's flush to the ceiling. Adjust the position of the nipple (F) on the mounting bracket (A) so that the canopy (G) covers at least half of the exterior threads on the canopy loop (H) when it's securely connected to nipple (F). Once an ideal position of the nipple (F) is determined, tighten the washer (C) and the hex nut (D) onto the nipple (F) just beneath the mounting bracket (A) to secure the nipple in place.

FINISHING THE INSTALLATION

Place the canopy (G) flush to the ceiling and slide the canopy loop ring (I) up beneath the canopy. Tightly screw canopy loop ring (I) onto the canopy loop (H) to properly secure the canopy (G) in place.

Secure the glass (T) onto the socket (S) with the socket ring (U). Install light bulbs (not included) in accordance with the fixture's specifications. Do not exceed the recommended maximum wattage.

Your installation is now complete. Turn on the power and test the fixture.

CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture. Dry with a lint-free or microfiber cloth.