




## INSTALLATION INSTRUCTIONS

### ZACA WALL MOUNT


*It is strongly recommended that Native Trails wall mount vanities are installed by a licensed contractor.*

*For ADA compliance, the Zaca Wall Mount must be installed in accordance with the requirements of ANSI/ICC A117.1 section 606.*

**Figure 1.** (front view)

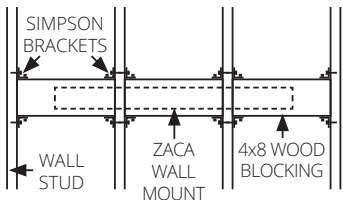

**Figure 2.** (top view)

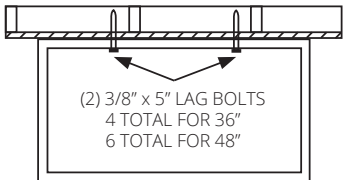

1. Determine desired height and location.
2. Remove drywall and install blocking support according to **Figure 1**. Install 4x8 wood blocking between each stud to the full length of Zaca Wall Mount; 3 blocks for 36" Zaca Wall Mount, 4 blocks for 48". Attach blocking to studs with Simpson A34 brackets (not supplied) on top and bottom of each block as shown in **Figure 1**. Front face of blocking should be flush with front face of stud.
3. Replace drywall, marking location of installed blocking. Patch drywall as needed.
4. Using Zaca Wall Mount as a template, mark mounting holes.
5. Using a 1/4" drill bit, pre-drill mounting holes into installed wall blocking for 3/8" lag bolts (not supplied).
6. Attach Zaca Wall Mount to wall according to **Figure 2**.
7. Install NativeStone®Trough sink and drain according to installation instructions.